

## How to Reset the PCB of BWRC388 PCB

Use tool to reset the pcb-red lighting means reset success

