

Bonwin hotel wireless electronic door lock needs to be initialized when first installation or changing main board. The detailed procedure is as follows:

1) System card: properly configure user cypher via cypher card (cypher is auto generated by management software). Regarding the same cypher card, it configures cypher when used the first time; it will start guiding setup card to configure room No., clock time info. when used the second time.

2) Network card: properly set network ID, channel No, local IP via network card, which can't open locks; It configures BW893 locks in order to network with controllers.

3) Setup card: to transfer info. (including system cypher, clock time, room No.) to door lock, which is in offline state. Setup card need be guided by cypher card (Setup card can be guided when red & green lights flash together after using cypher card)

After above three steps, the initialization finished and door locks can be put into use.

